

Product Code	Description	D51B	D51B	D51B	D51B	G101B	G101B	D61B	D61E	G111E	G11E
			B	C	E	B	C				
FW0331	Nat Gas Pilot Burner s/s		X	X	X	X	X	X	X	X	X
FW0340	Pilot Valve Kit	X									
FW0341	Pilot Valve Kit		X	X	X	X	X	X	X	X	X
FW0350	Mag Valve c/w FW0537 & FW0538	X	X	X	X	X	X	X	X	X	X
FW0355	Gas Filter 2/pack	X	X	X	X	X	X	X	X	X	X
FW0360	Gas Valve Push Rod 5/pack	X	X	X	X	X	X	X	X	X	X
FW0365	Push Rod Guide Screw 5/pk	X	X	X	X	X	X	X	X	X	X
FW0370	Hot Water Outlet Pipe	X	X	X	X			X	X		
FW0371	Hot Water Outlet Pipe					X	X			X	X
FW0390	¾ X 15mm Gas Coupling	X	X	X	X	X	X	X	X	X	X
FW0391	Swivel ISV 3/4 X 15mm"	X	X	X	X	X	X	X	X	X	X
FW0392	Swivel ISV 3/4 X 10mm"	X	X	X	X			X	X		
FW0395	Main Valve Spring 5/Pack	X									
FW0396	Main Valve Spring 5/Pack		X	X	X	X	X	X	X	X	X
FW0405	Main Gas Valve Disc 5/Pack	X	X	X	X	X	X	X	X	X	X
FW0410	Magnetic Valve Cover Plate	X	X	X	X	X	X	X	X	X	X
FW0415	Push Rod & Disc	X	X	X	X	X	X	X	X	X	X
FW0426	Front Cover Hex Nut 5/Pack		X	X	X			X	X		
FW0427	Front Cover Hex Nut 5/Pack					X	X			X	X
FW0435	Lower Cover Plate	X	X	X	X	X	X	X	X	X	X
FW0450	Spark Button Insert				X				X	X	X
FW0455	Spark Igniter Button				X				X	X	X
FW0460	Spark Wire				X				X	X	X
FW0465	Front Cover Ret Clips 10/Pk								X	X	
FW0470	Spindle Ext Spring Clip 10/Pk					X	X			X	X
FW0475	Spark Button Guide Bracket				X				X	X	X
FW0480	Spark Assembly Mounting Bracket				X				X		
FW0481	Spark Assembly Mounting Bracket									X	X
FW0485	Spark Generator				X				X	X	X
FW0490	Spark Generator Bracket				X				X	X	X
FW0495	Fixing Clamp			X	X			X	X		
FW0496	Fixing Clamp					X	X			X	
FW0500	Heat Exchanger Left Support									X	
FW0505	Heat Exchanger Right Support									X	
FW0511	Heat Exchanger Spring Clip Left									X	
FW0512	Heat Exchanger Spring Clip Right							X	X		
FW0515	Battery Cap				X				X	X	X
FW0530	Heat Exchanger Washer 10Pk	X	X	X	X	X	X	X	X	X	X
FW0531	Burner Bar Cork Washer 5 pack	X	X	X	X	X	X	X	X	X	X
FW0533	Top cover Gasket 10/Pack		X	X	X	X	X	X	X	X	X
FW0534	Gas Valve Spindle O Ring 10/Pack	X	X	X	X	X	X	X	X	X	X
FW0535	Water Assy Outlet Union O Ring 10/Pack	X	X	X	X	X	X				
FW0536	Valve Disk Seal 10/Pack	X	X	X	X	X	X	X	X	X	X
FW0537	Brass Washer 10/Pack	X	X	X	X	X	X	X	X	X	X
FW0538	Magnetic Valve Seal 10/Pack	X	X	X	X	X	X	X	X	X	X
FW0539	3/4 BSP Washer Each"	X	X	X	X	X	X	X	X	X	X
FW0540	Gas Valve Push Rod O Ring 10/Pack	X	X	X	X	X	X	X	X	X	X
FW0542	Water Control Spindle O Ring 10/Pack	X	X	X	X	X	X	X	X	X	X
FW0543	Water Assy Inlet Union O Ring 10/Pack	X	X	X	X	X	X	X	X	X	X
FW0544	10mm Drain Plug Washer 10/Pack	X	X	X	X	X	X	X	X	X	
FW0545	Pilot Washer 10/Pack	X	X	X	X	X	X	X	X	X	X
FW0547	3/8 BSP Washer Nylon 10/PK"	X	X	X	X	X	X	X	X	X	X
FW0548	Pressure Nipple Washer/Test Point Washer	X	X	X	X	X	X	X	X	X	X
FW0560	Screw (Assembly Cover to Burner Bar) 10/Pack		X	X	X	X	X	X	X	X	X
FW0561	Screw (Burner Bar to Main Burner) 10/Pack		X	X	X	X	X	X	X	X	X
FW0562	Screw (Diaphragm) 10/Pack	X	X	X	X	X	X	X	X	X	X
FW0563	Water Assy Inlet Union Clip Pack 5	X	X	X	X	X	X	X	X	X	X
FW0564	Water Assembly Outlet Union Clip 5 Pack	X	X	X	X	X	X	X	X	X	X
FW0566	Thermocouple Locking Nut (Single)	X	X	X	X	X	X	X	X	X	X
FW0567	Roll Pin 5/Pk	X	X	X	X	X	X	X	X	X	X
FW0568	Gas Spindle Spring 5/Pack	X	X	X	X	X	X	X	X	X	X
FW0570	Front Cover Screws 10/Pack							X	X	X	X
FW0580	Main Burner Inj Nat Gas 6/Pack		X	X	X			X	X		

		D51B	D51B	D51B	D51B	G101B	G101B	D61B	D61E	G111E	G11E
Product Code	Description		B	C	E	B	C				
FW0581	Pilot Injector Nat Gas		X	X	X	X	X	X	X	X	X
FW0582	Regulating Washer Nat Gas each					X	X			X	X
FW0583	Regulating Washer Nat Gas each		X	X	X			X	X		
FW0591	D51/D61 Nat Gas Kits		X	X	X			X	X		
FW0592	G11E Nat Gas Kits					X	X			X	X
FW0595	Water Outlet Union O Ring 10/pk							X	X	X	X
FW0597	8mm Drainplug Washer 10/pk							X	X	X	X
MRS0210	Nat Gas Injector (1.18mm) 12 pack					X	X			X	X